
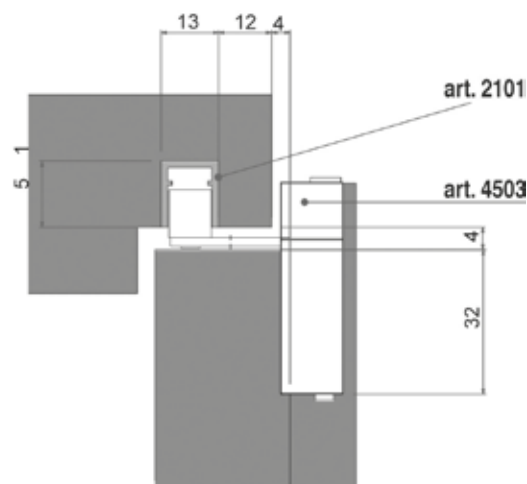
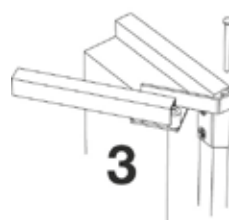
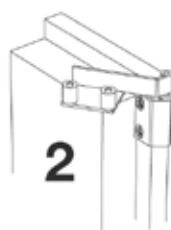


Garnitura za


Levi komplet – **Art. 3410**

Desni komplet – **Art. 3411**

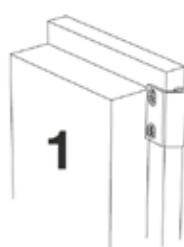


Montaža

1. Privijačite fiksni del spone na rob vrat, upoštevajoč mere na desni strani.
2. Nastavite nosilec s kolesi na spono na vratih.
3. Vstavite par koles v pripadajoče vodilo zgoraj (**2101**).

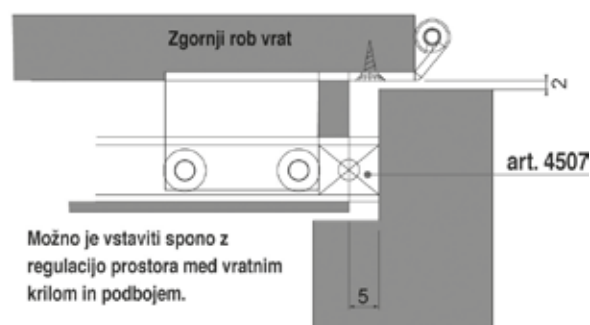

Spone "ANUBA"


Nastavite zavoro (4507) tako, da zaprta vrata zatesnijo.

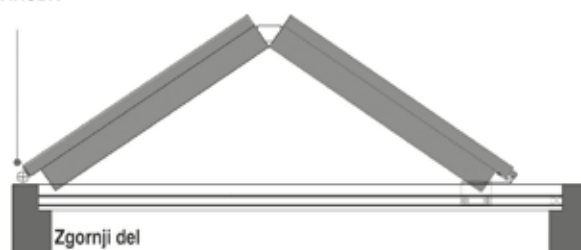


art. 4503

art. 4502

Serija **4500** priporoča spono na podbojih tip "ANUBA".

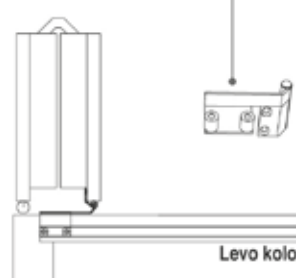

Levo kolo

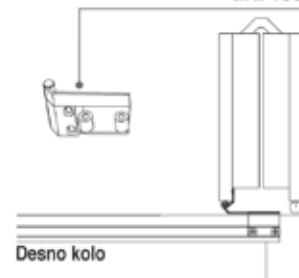

Desno kolo