

NOVA PRO SCALA

Drawers H122




- The elegant intermediate height for special applications
- Can be personalised with designer panels
- Integrated height, side and tilt angle adjustment
- Optimum use of space due to straight in side surfaces and low construction width
- Robust design and high level of stability
- Tool-free installation and removal of the front
- Width of bottom and back panel is the same
- Bottom panel machining not required

Packaging unit (PU):

- 123 = 100 items in PE
- 201 = 1 item in cardboard box (smallest PU = 10 units)
- 211 = 20 items in a cardboard box
- 250 = 1500 items in a cardboard box
- 547 = 1000 items in PE in a cardboard box

ORDER INFORMATION

- 1** Nova Pro Scala drawer sides H122
Set: One left, one right




NL	Stone				Ice				Silver							
	Art.-no.	PU			Art.-no.	PU			Art.-no.	PU						
400	F100 103225	201	211		F100 103252	201	211		F100 103279	201	211					
450	F100 103228	201	211		F100 103255	201	211		F100 103282	201	211					
500	F100 103231	201	211		F100 103258	201	211		F100 103285	201	211					
550	F100 103234	201	211		F100 103261	201	211		F100 103288	201	211					
600	F100 103237	201	211		F100 103264	201	211		F100 103291	201	211					

- 2** Installation hook
Single item: Can be used on left/right



	Description	Art.-no.	PU		
32 mm	Expansion dowel	F102 117719	123	547	
50 mm	Expansion dowel	F102 117720	123	547	
32 mm	For press fitting	F102 021854	123		250
50 mm	For press fitting	F102 021153	123		250
	For screw fixing	F102 021855	123	547	

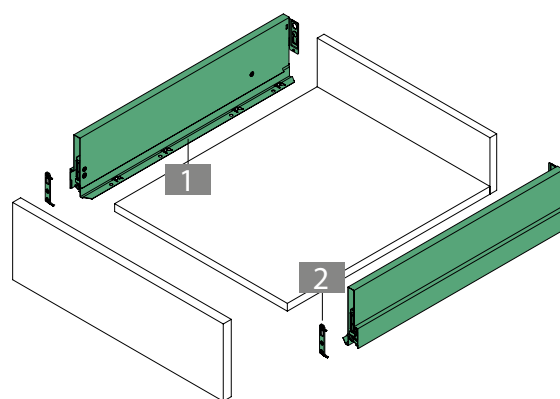


PAGE REFERENCES


Slides	34	Technical information	72	Assembly technology	114
Designer panels	62	Sensomatic	79	Assembly aids	118
Accessories	64	Organising systems	101	Packaging code	123

PLANNING DIMENSIONS

All dimensions in millimetres

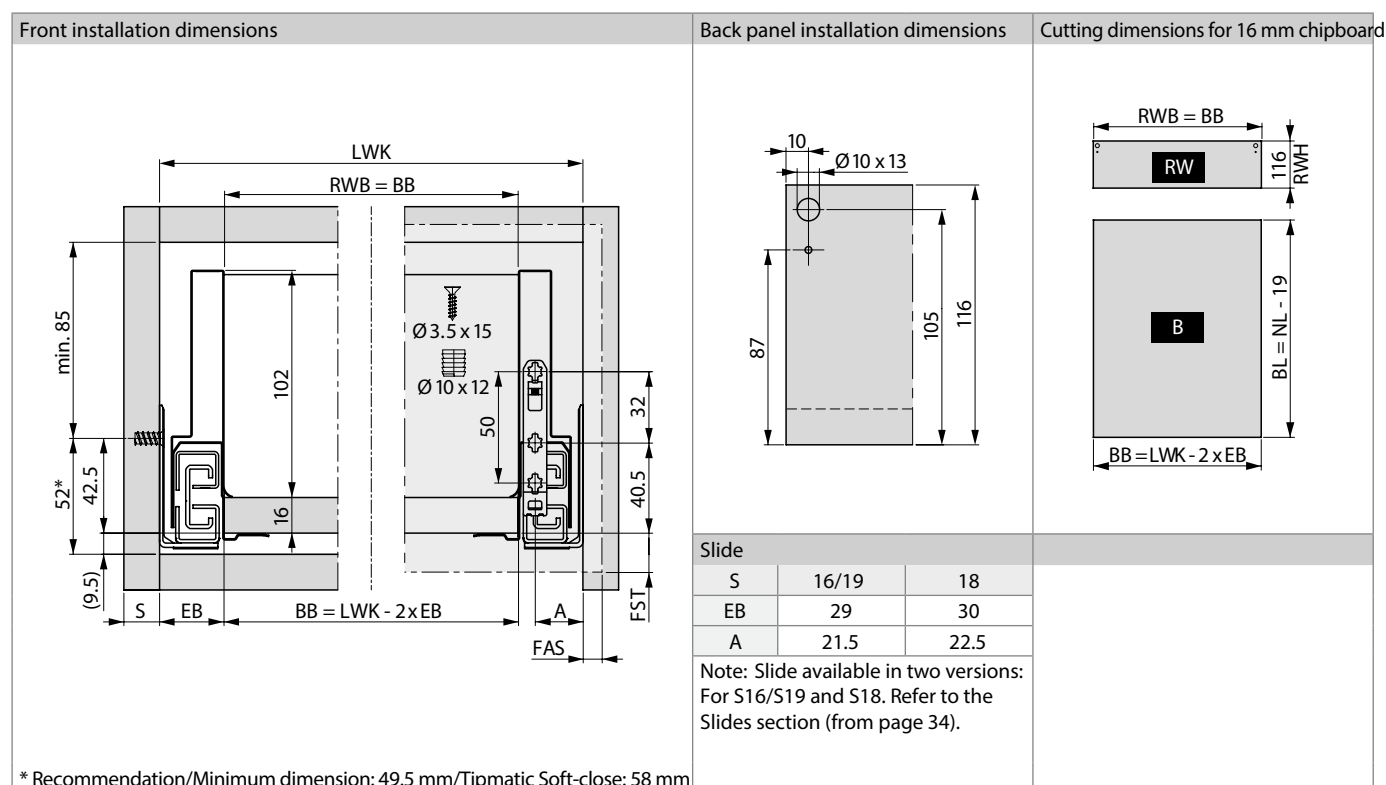

Fixing positions for full extension slide

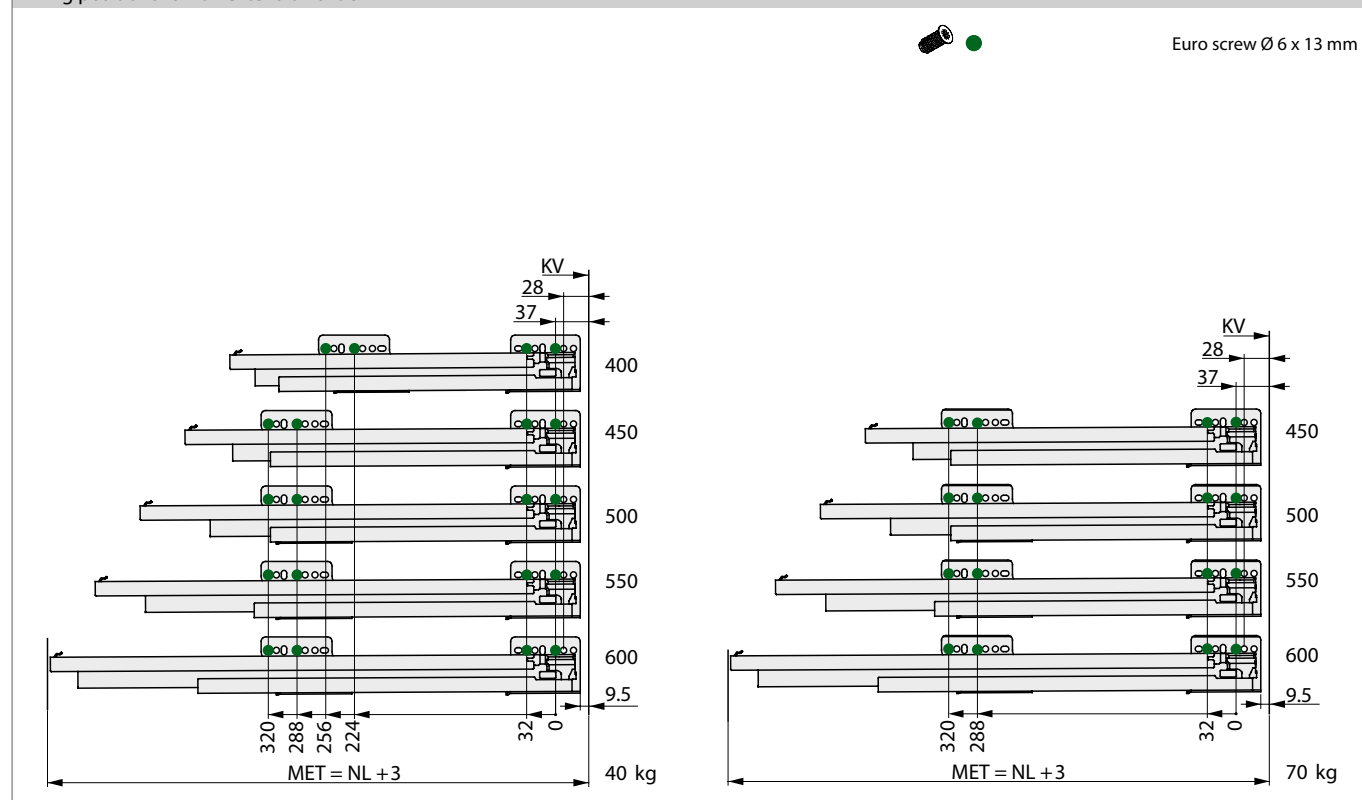

LEGEND

B	Bottom panel	FST	Front overlay	NL	Nominal length
BB / BL	Bottom width / Bottom length	KV	Front edge of cabinet	RW	Back panel
EB	Construction width	LWK	Inside cabinet width	RWB	Width of back panel
FAS	Front overlay, side	MET	Minimum installation depth	RWH	Height of back panel