




SHOCK ABSORBERS

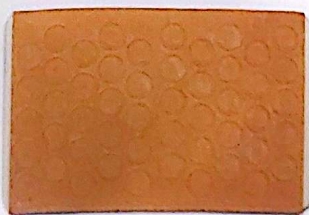


CODE	D	A	PACK	COLOR
150.0715.05	7	1,5	2000	TRANSP
150.1015.05	10	1,5	2000	TRANSP
150.1030.05	10	3	2000	TRANSP

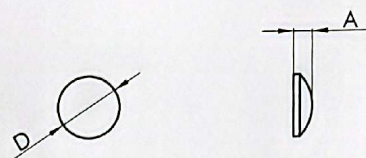


CODE	PACK	COLOR
PC02.000.05	2000	TRANSP

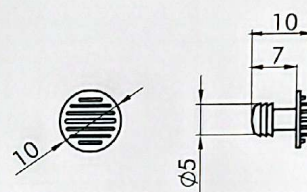


CODE	PACK	COLOR
PC03.000.05	2000	TRANSP

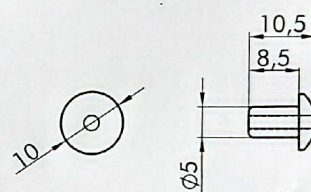


CODE	PACK	COLOR
240.7078.06	500	GRAY

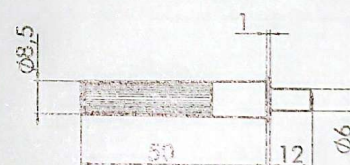



CODE	PACK	COLOR
240.7079.06	500	GRAY

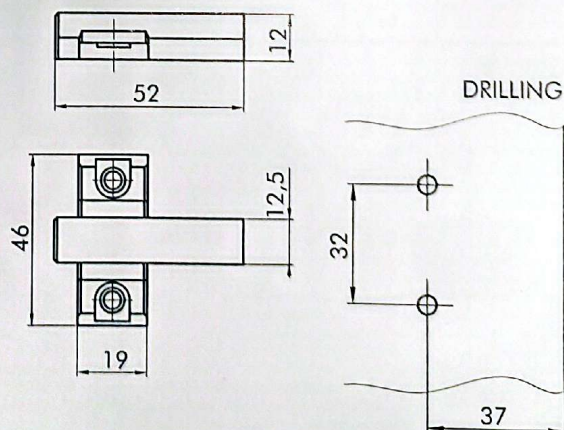



SHOCK ABSORBERS

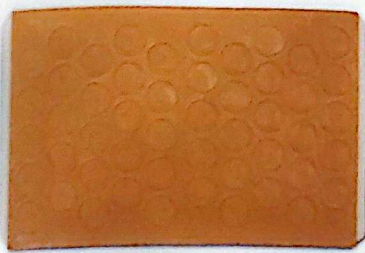



CODE	D	A	PACK	COLOR
150.0715.05	7	1,5	2000	TRANSP
150.1015.05	10	1,5	2000	TRANSP
150.1030.05	10	3	2000	TRANSP

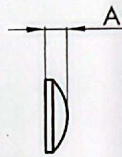


CODE	PACK	COLOR
PC02.000.05	2000	TRANSP

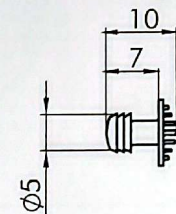

CODE	PACK	COLOR
PC03.000.05	2000	TRANSP

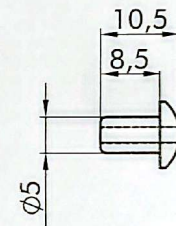

CODE	PACK	COLOR
240.7078.06	500	GRAY

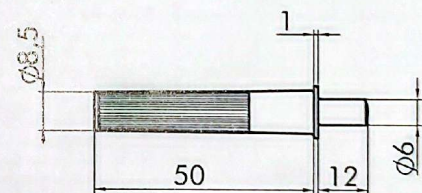

CODE	PACK	COLOR
240.7079.06	500	GRAY

